

CHECKING BRIDLES FOR STRETCH **OR SHRINKAGE**

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.


RECOMMENDATIONS

- · Open your kite in a large space, big enough to spread your kite out fully.
- · Use a tape measure to measure the bridles.
- · Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM							
LINE NO.	4M	6M	8M	10M	12M	14M	16M
A1	710	870	1000	1090	1200	1330	1415
A2	480	585	675	735	810	880	935
A3	415	500	585	635	700	1300	1385
A4	310	385	435	480	525	760	810
A5	-	-	-	-	-	570	610
AL1	980	1200	1390	1515	1665	950	1010
AL2	480	590	680	740	815	910	970
AL3	-	-	-	-	-	880	940
KL1	-	-	-	-	-	520	555
KL2	-	-	-	-	-	500	530
KL	575	650	750	790	910	530	565

CATALYST V3 4/6/8/10/12M RIGGING DIAGRAM

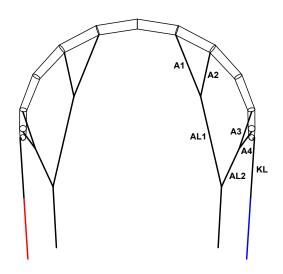

CATALYST V3 14/16M RIGGING DIAGRAM

